3253

TAPE DECK MODEL RS-277US SCHEMATIC DIAGRAM

PRE-AMPLIFIER UNIT

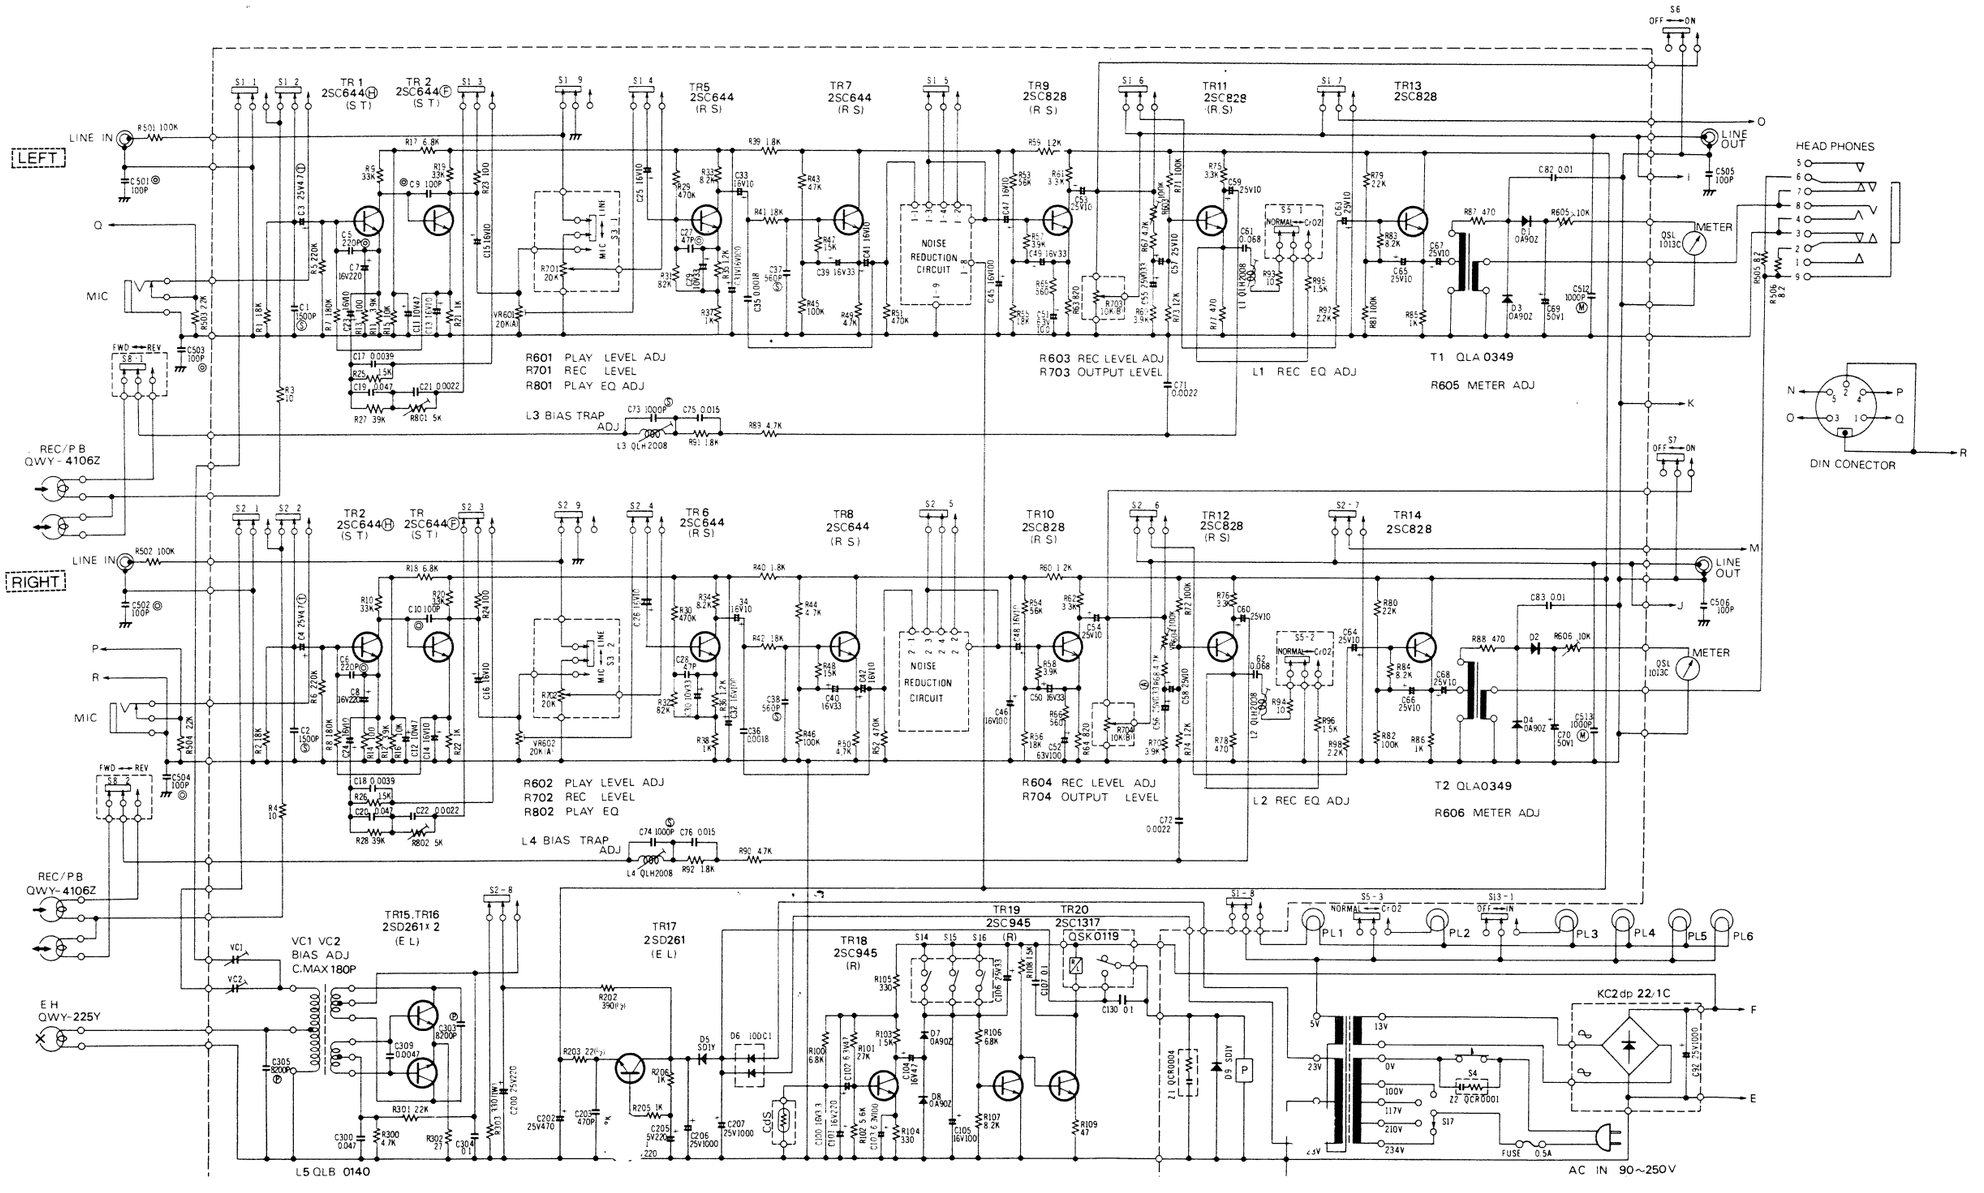

3253

DOLBY NOISE REDUCTION CIRCUIT

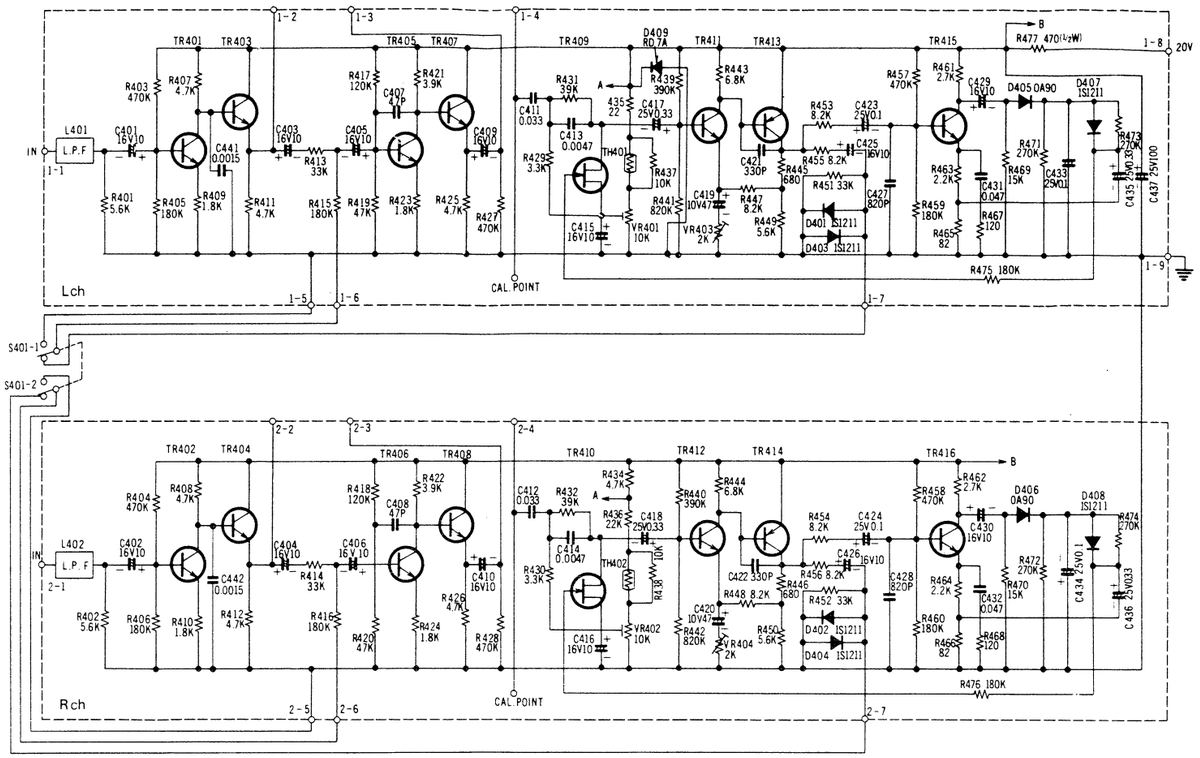

(NOTE)
S1-1 ~ S1-9, S2-1 ~ S2-9
REC/PLAY SW (PLAY. position)
S3-1 ~ S3-2: SELECTOR SW (LINE. position)
S4: POWER SW (ON. position)
S5-1 ~ S5-3: TAPE SELECTOR SW (NORMAL. position)
S6 ~ S7: REC MUTING SW (OFF. position)
S8-1 ~ S8-2: DIRECTION SW (FWD. position)
S401-1 ~ S401-2: DOLBY SW (IN. position)
PL1: RECORD LAMP
PL2: TAPE SELECTOR LAMP
PL3: NOISE REDUCTION CIRCUIT LAMP
PL4: Cds LAMP
PL5 ~ PL6: METER LAMP
S13-1: NOISE REDUCTION CIRCUIT IN-OFF SW (OFF. position)
S14: PLUNGER CUT SW (OFF. position)
S15: TIMING SW (OFF. position)
S16: PAUSE PLUNGER CUT SW (OFF. position)

CONTROL CIRCUIT

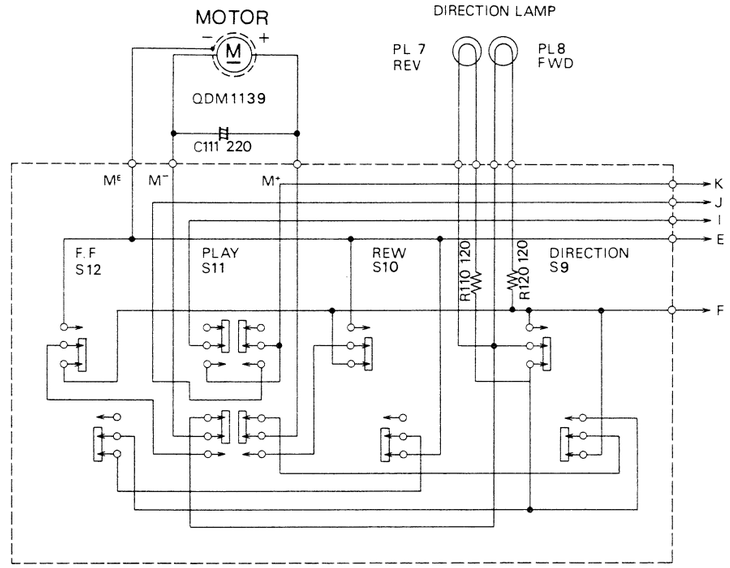

* This schematic diagram is subject to change, to accomodate improvements in design.

Printed in Japan QQD-0211 6H72-1